



# CCV Internal Catch Can

2011-2023 Ford 6.7L Powerstroke

 [support@minimaxxtuner.com](mailto:support@minimaxxtuner.com)

 [www.minimaxxtuner.com](http://www.minimaxxtuner.com)

 Minimaxxtuner



## PACKING INCLUDE

- 1 × CCV Internal Catch Can
- 1 × Sealing Ring
- 2 × M6\*76MM Stainless Steel Hexagon Socket Bolts (FitSPIS26010)
- 2 × M6\*30MM Stainless Steel Hexagon Socket Bolts (FitSPIS26016)



## WARNING


**CAUTION!!!** Never work on a hot vehicle. Serious injury in the form of burns can result if the vehicle has been in use. Allow vehicle to cool prior to installation. Always wear eye protection when working on or under any vehicle.

**Note:** For your safety we recommend disconnecting any negative battery terminals whenever working on any vehicle. Installation of the Cold Air Intake requires removal of the plumbing to the turbo intake. Use caution not to get any dust, debris, or tools left where they may enter the system.

## INSTALLATION NOTES

**Note:** Prior to installation, please compare the parts that you have received with the bill of materials listed above to ensure that you have all the necessary parts for installation.

---

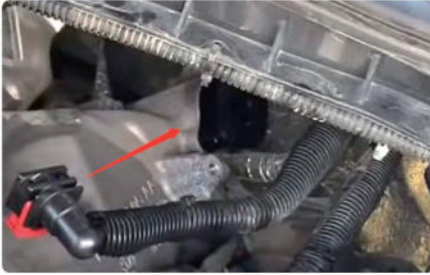

**Step 1:** Remove your current CCV outlet 2 bolt hose flange.



**Step 2:** Install the Internal catch can below the 2 bolt flange. Install the o ring and use the supplied longer hardware. Push the ICC towards the front of the vehicle and tighten the bolts.

(**Note:** It may be necessary to file or sand the edges to get the baffle to drop all the way in. This is due to casting irregularities from Ford. It's usually not necessary to remove much material if anywhere the rubbing is occurring, remember to take small amounts off at a time.)



Technical Support: email us [support@minimaxtuner.com](mailto:support@minimaxtuner.com)  
[www.spelabautoparts.com](http://www.spelabautoparts.com)

---